

**PRESTO**




# INSTALLATION GUIDE


■ **simplified**



## GEOWEB® Retaining Wall System

■ **Geosynthetic-Reinforced**

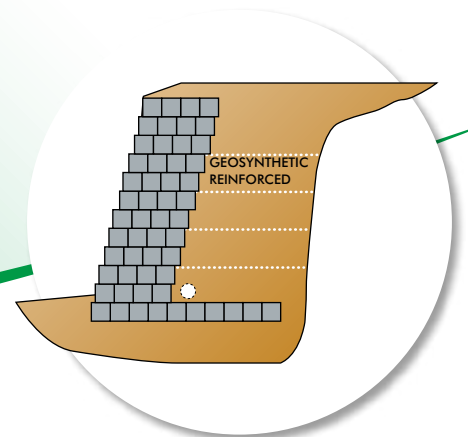


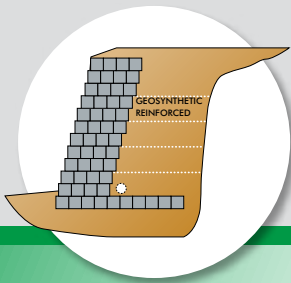


# GEOWEB® Retaining Wall System

## ■ Geosynthetic-Reinforced Retaining Walls

**1** Prepare subgrade. Remove debris, rocks.


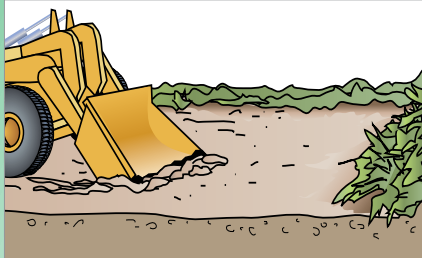


**2** Install geotextile (per manufacturer's recommendations).

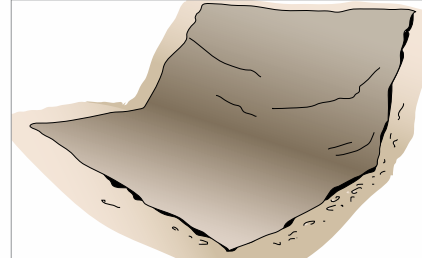


**3** Expand GEOWEB® wall sections with Method A, B or C. Infill sections.


### A Stretcher Frame

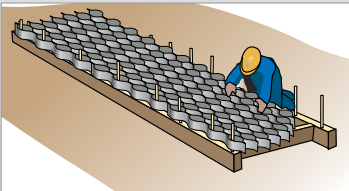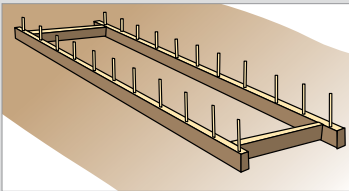


Place infill

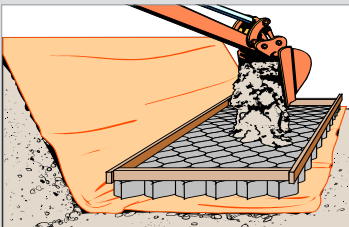


Remove stretcher frame

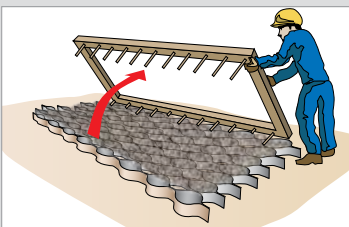


### B Stretcher Bars

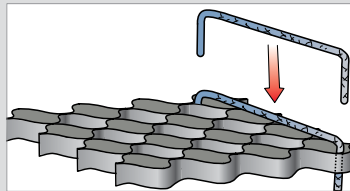

Recommended  
for curves

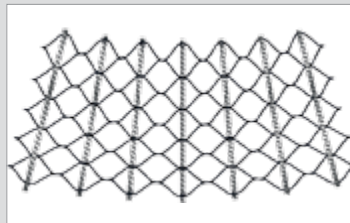


Place infill

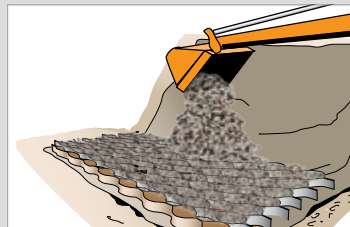


Remove stretcher bars



Place solid  
panel to  
the front  
of the wall

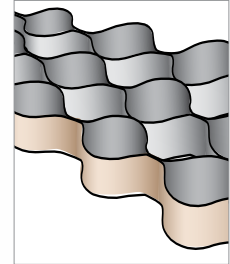

### C ATRA® Anchors

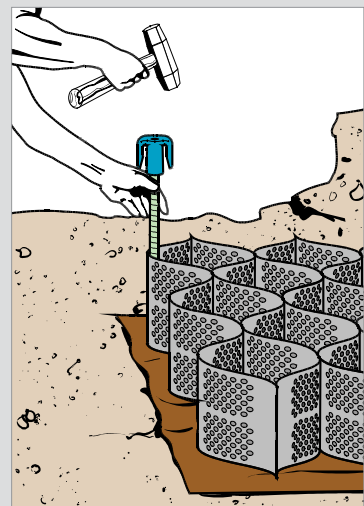


Place infill




## IMPORTANT NOTE:

The simplified installation guide provided by Presto GEOSYSTEMS® is intended as a general guideline only. The contractor should follow contract plans and specifications and refer to detailed installation guidelines for more information: See [www.prestogeo.com/installation](http://www.prestogeo.com/installation)



- 4** Connect GEOWEB® sections side to side with ATRA® keys.

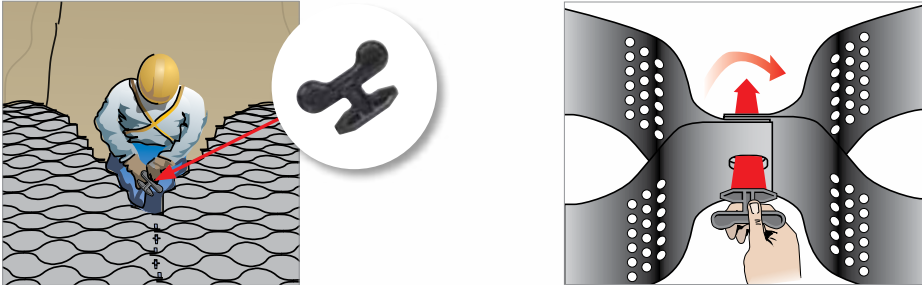


- 5** Cut GEOWEB® front fascia panels with utility knife to insert ATRA® keys.

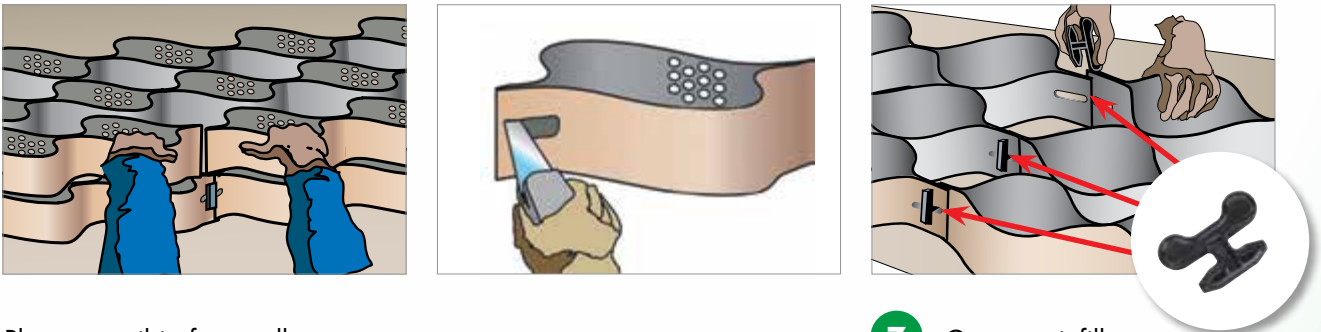

- 6** Place topsoil in front cells.

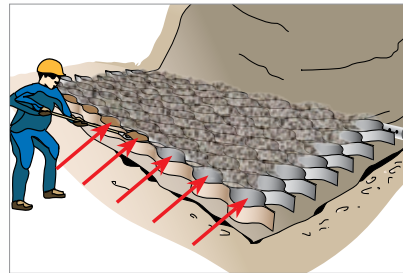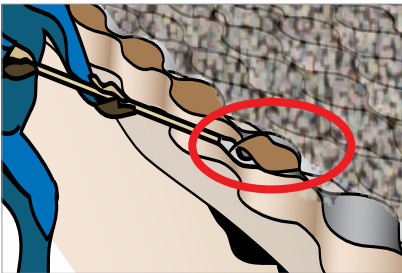


- 7** Compact infill.

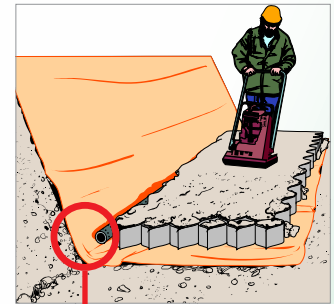


1 % min.


- 8** Remove excess material to expose top cell walls.

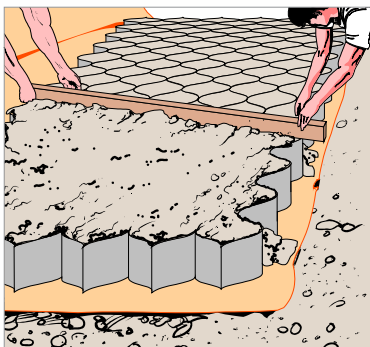

- 9** Install GEOWEB® layers as specified. Assure minimum 2 inch (50 mm) set back.

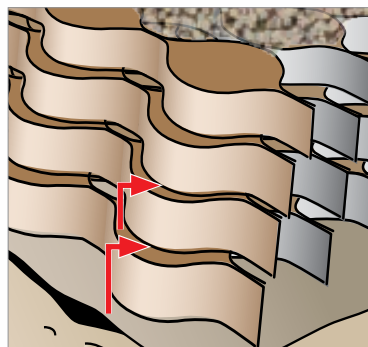


min. set back 2 in (50 mm)

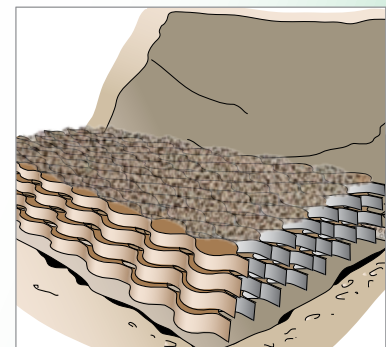


Detailed installation guidelines at: [www.prestogeo.com/installation](http://www.prestogeo.com/installation)


**10** Install specified geogrid (in accordance with manufacturer's recommendations).

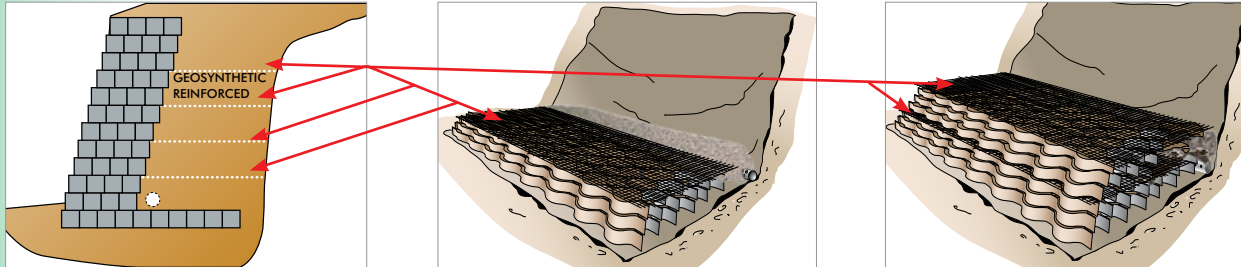

**11** Apply seed by hand (A) or by hydroseed method (B).

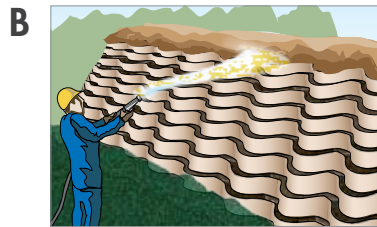

**12** Completed vegetated retaining wall.

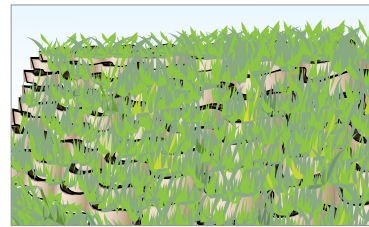

**LIMITED WARRANTY**

Presto GEOSYSTEMS® warrants each GEOWEB® section which it ships to be free from defects in materials and workmanship at the time of manufacture.

Presto's exclusive liability under this warranty or otherwise will be to furnish without charge to Presto's customer at the original f.o.b. point a replacement for any section which proves to be defective under normal use and service during the 10-year period which begins on the date of shipment by Presto. Presto reserves the right to inspect any allegedly defective section in order to verify the defect and ascertain its cause.

This warranty does not cover defects attributable to causes or occurrences beyond Presto's control and unrelated to the manufacturing process, including, but not limited to, abuse, misuse, mishandling, neglect, improper storage, improper installation, improper alteration or improper application.

PRESTO MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTIES OR MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, IN CONNECTION WITH THE GEOWEB® SYSTEM. IN NO EVENT SHALL PRESTO BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR FOR ANY OTHER REASON, INCLUDING NEGLIGENCE, IN CONNECTION WITH THE GEOWEB® SYSTEM.

GEOSYSTEMS®, GEOWEB®, and ATRA® are registered trademarks of Reynolds Presto Products Inc.



**PRESTO GEOSYSTEMS®**

P.O. Box 2399  
670 North Perkins Street  
Appleton, Wisconsin 54912-2399, USA

**P:** 920-738-1328

**TF:** 800-548-3424

**F:** 920-738-1222

**E:** info@prestogeo.com

[www.prestogeo.com](http://www.prestogeo.com)

**DISTRIBUTED BY:**